


## 2.3 System Operating Instructions

The Auxiliary Cooling System operating instructions will follow the sequence below for each system:

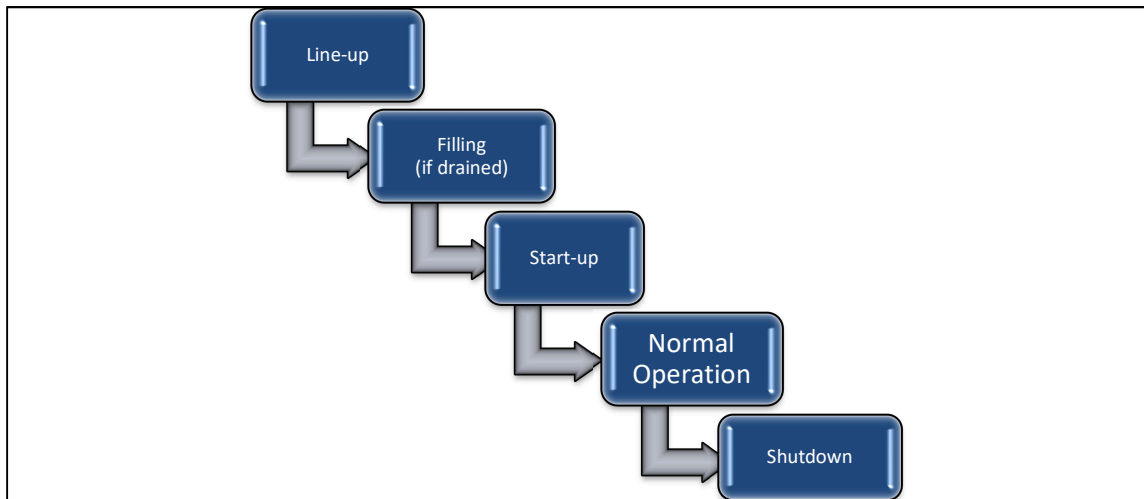

## 2.4 START-UP

### 2.4.1 Start-up Checklist

Before start-up of the North/South Auxiliary Cooling Systems, the following conditions **MUST** be met:

1. All strainers are clean and installed per system
2. The demineralised water system, \*GHC is available and commissioned
3. The potable water system, \*GKC is available and commissioned
4. The chemical dosing systems for open circuit and closed circuits are available and commissioned
5. All cooling water consumers (unitised/common) are ready for hot start-up
6. All electrical conditions are safe for operation.

